



Quick Start Guide

1 In the Box



TV Box



Remote Control



Power Supply



Ethernet/LAN Cable



HDMI Cable



AAA Batteries

2 Remote Control Unit

Voice Search Microphone
Microphone for Voice Search

Direct Number Entry
Manual entry of numbers

Teletext
Open Teletext service for the current channel

Apps and Games
Open the Apps and Games section

Google Assistant
Press the mic button to talk to Google

Back
Revert back to the previously displayed screen

Volume
Increase/ Decrease audio volume

Trick Play Functions
Fast Forward / Backwards, Play/Pause

Netflix
Open the Netflix Application

Power On / Standby
Power On / Off Set-Top-Box

Information
Displays content information

Settings
Access the Settings

Navigation
Navigation up, down, left, right and select

Home
Opens the home page

Guide
Open the EPG Guide

Channel Zapping
Change channel up and

Mute
Mute / Unmute Audio Output

 
Colour Select Buttons
HbbTV shortcuts

Prime Video
Open the Prime Video Application



3 Quick Start


The following highlighted steps describe how to quickly set up your TV service. More details can be found in the user guide.

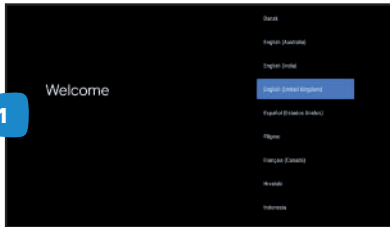

1

Welcome

 
Select your preferred language.

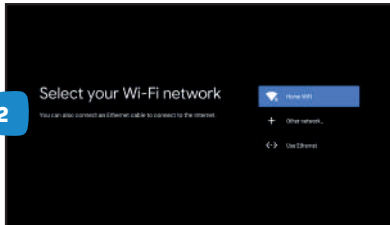

2

Wi-Fi Network

 
Select your WiFi network or connect via Ethernet connected to your home router.

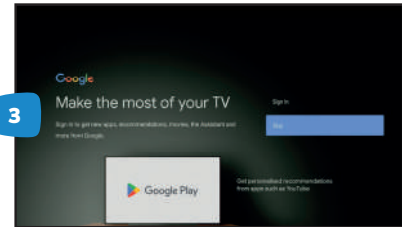

3

Sign In

 It is recommended to sign in with your Google Account in order to access Google Play.

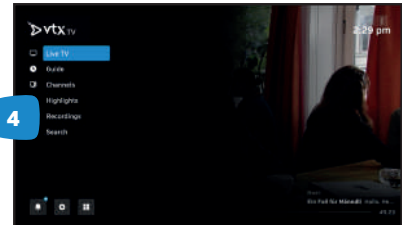

4



Enjoy



Navigate to your preferred feature and start enjoying the service.

4 Safety Information

Careful!

Please read all of the instructions before operating the device for the first time and retain for future reference

- Only use attachments/accessories specified or provided by the manufacturer (such as the exclusive supply adapter, battery, etc.).
- Please refer to the information on the product enclosure for electrical and safety information before installing or operating the apparatus.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- The apparatus shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the apparatus.
-  This mark indicates a risk of electric shock.
- To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
-  Danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent types.
- The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire, or the like.
- Excessive sound pressure from earphones and headphones can cause hearing loss. Listening to music at high volume levels and for extended durations can damage one's hearing.
- In order to reduce the risk of damage to hearing, one should lower the volume to a safe, comfortable level, and reduce the amount of time listening at high levels.
- When not in use and during movement, please take care of the power cord set, e.g. tie up the power cord set with a cable tie or something similar. It shall be free from sharp edges or similar which can cause abrasion of the power cord set. When put into use again, please make sure the power cord is not damaged. The absence of a light indication on the apparatus does not mean that it is fully disconnected from the mains supply. To disconnect the apparatus completely, the mains plug must be completely unplugged.

- Attention should be drawn to environmental aspects of battery disposal.
- No open flame sources, such as lighted candles, should be placed on the apparatus.
-  To prevent the spread of fire, keep candles or other open flames away from this product at all.
-  Equipment with this symbol is a Class II or double-insulated electrical appliance. It has been designed in such a way that it does not require a grounded connection.

Precaution

- Never try to open the device. It is dangerous to touch the inside of the device due to high voltages and possible electrical hazards.
- Opening the device will void the warranty of the product. Refer all maintenance or servicing to suitably qualified personnel.
- When you are connecting cables, be sure that the device is disconnected from the mains supply voltage. Wait a few seconds after switching off the device before you move the device or disconnect any equipment.
- It is a necessity that you only use an approved extension and compatible wiring that is suitable for the electrical power consumption of the installed equipment. Please ensure that the electrical power supply corresponds with the voltage on the electrical identification plate at the back of the device.

Declaration of conformity

- Hereby, Skyworth declares that the equipment is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address <https://www.strong.tv/en/Doc>.

Operating Environment

- Do not install this equipment in a confined space such as a bookcase or similar unit.
- Do not use the set near damp, and cold areas, protect the set from overheating.
- Do not place candles near the opening area, to avoid flammable foreign material from entering the device.
- Keep away from direct sunlight.
- Do not use the set near dust place.



WEEE Directive

- Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.



The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Manufactured by STRONG Ges.m.b.H.

Google and Google Play are trademarks of Google LLC.

Address: Teinfaltstraße 8/4.Stock. A-1010 Vienna. Austria.